

## Nasz Magazyn

| HP/Canon Series   | Numer-toner/tusz               |
|---|--------------------------------|
| HP LaserJet P3015 series  | CE255A                         |
| HP LaserJet P3015 series (High Yield)   | CE255X                         |
| HP LaserJet 2300 series   | Q2610A                         |
| HP LaserJet 1010, 1012, 1015, 1020, 1022 Series                                 | Q2612A/FX10/FX9/Canon 703      |
| HP LaserJet P1566 series  | CE278A/Canon 728               |
| HP LaserJet Pro 400 M401, 400 series  | CF280A                         |
| HP LaserJet Pro 400 M401, 400 series  | CF280X                         |
| HP LaserJet P1102/ P1102W/ M1130/ M1132/ M1212 series                           | CE285A/Canon 725               |
| HP LaserJet P4015, P4515 series   | CC364A                         |
| HP LaserJet P4015, P4515 series (High Yield)                                    | CC364X                         |
| HP LaserJet 5L/5L xtra/5L-FS/6L/6Lse/6Lxi/3100/3100se/3100xi/3150/3150xi/3150se | C3906A                         |
| HP LaserJet 5si, and 8000 series  | C3909A                         |
| HP LaserJet M4555MFP  | CE390A                         |
| HP LaserJet M4555MFP  | CE390X                         |
| HP LaserJet 1100, and 3200 series   | C4092A                         |
| HP LaserJet 2100, and 2200 series   | C4096A                         |
| HP LaserJet 4000, 4050 Series   | C4127X/C8061X                  |
| HP LaserJet 5000, and 5100 series   | C4129X                         |
| HP LaserJet 8100, and 8150 series   | C4182X                         |
| HP LaserJet P1005 and P1006, P1505 and M1522 series                             | CB435/436A/Canon 712/Canon 713 |
| HP LaserJet P2035, P2035N series  | CE505A/Canon CRG719            |
| HP LaserJet P2035, P2055DN, P2055X series (High Yield)                          | CE505X                         |
| HP LaserJet 4250, 4350 Series   | Q5942A/I338A/I339A             |
| HP LaserJet 4250, 4350 Series   | Q5942X/I338A/I339A             |
| HP LaserJet 1160, 1320, 3390, 3392 Series / HP 2015                             | Q5949A/7553A                   |
| HP LaserJet 1160, 1320, 3390, 3392 Series / HP 2015                             | Q5949X/7553X                   |
| HP LaserJet 2410, 2420, 2430 series   | Q6511A                         |
| HP LaserJet 2410, 2420, 2430 series (High Yield)                                | Q6511X                         |
| HP LaserJet 1000, 1200, 1220, 3300, 3310, 3320, 3330, 3380 series               | C7115A/Q2613A/Q2624A           |
| HP LaserJet 1000, 1200, 1220, 3300, 3310, 3320, 3330, 3380 series (High Yield)  | C7115X/Q2613X/Q2624X           |
| HP LaserJet 5200 series   | Q7516A                         |

|  |                     |
|--|---------------------|
| HP LaserJet M3027, M3035, P3005 series                             | Q7551A              |
| HP LaserJet M3027, M3035, P3005 series (High Yield)                | Q7551X              |
| HP LaserJet 9000 series  | C8543X              |
| <b>HP/Canon Series (Color)</b>                                     |                     |
| HP LaserJet M251/267 series  | CF210A              |
| HP LaserJet M251/267 series  | CF211A              |
| HP LaserJet M251/267 series  | CF212A              |
| HP LaserJet M251/267 series  | CF213A              |
| HP Color LaserJet CP3525/ 3525X Series                             | CE250A              |
| HP Color LaserJet CP3525/ 3525X Series                             | CE250X              |
| HP Color LaserJet CP3525/ 3525X Series                             | CE251A              |
| HP Color LaserJet CP3525/ 3525X Series                             | CE252A              |
| HP Color LaserJet CP3525/ 3525X Series                             | CE253A              |
| HP Color Toner for Laserjet CPI025                                 | CE310A              |
| HP Color Toner for Laserjet CPI025                                 | CE311A              |
| HP Color Toner for Laserjet CPI025                                 | CE312A              |
| HP Color Toner for Laserjet CPI025                                 | CE313A              |
| HP Color Laserjet Laserjet CMI415 / Laserjet CPI525n               | CE320A              |
| HP Color Laserjet Laserjet CMI415 / Laserjet CPI525n               | CE321A              |
| HP Color Laserjet Laserjet CMI415 / Laserjet CPI525n               | CE322A              |
| HP Color Laserjet Laserjet CMI415 / Laserjet CPI525n               | CE323A              |
| HP Colour LaserJet 2550, 2820, 2840 Series                         | Q3960A              |
| HP Colour LaserJet 2550, 2820, 2840 Series (High Yield)            | Q3961A              |
| HP Colour LaserJet 2550, 2820, 2840 Series (High Yield)            | Q3962A              |
| HP Colour LaserJet 2550, 2820, 2840 Series (High Yield)            | Q3963A              |
| HP CP4005/CP4005dn/CP4005n   | CB400A              |
| HP CP4005/CP4005dn/CP4005n   | CB401A              |
| HP CP4005/CP4005dn/CP4005n   | CB402A              |
| HP CP4005/CP4005dn/CP4005n   | CB403A              |
| HP LaserJet Pro 400 Color M451dn/ M451dw /M451nw/MFP M475dw/M475DN | CE410A              |
| HP LaserJet Pro 400 Color M451dn/ M451dw /M451nw/MFP M475dw/M475DN | CE411A              |
| HP LaserJet Pro 400 Color M451dn/ M451dw /M451nw/MFP M475dw/M475DN | CE412A              |
| HP LaserJet Pro 400 Color M451dn/ M451dw /M451nw/MFP M475dw/M475DN | CE413A              |
| HP Color LaserJet CP2025dn,2025n,2025x Series UNIVERSAL CRG718     | CC530A              |
| HP Color LaserJet CP2025dn,2025n,2026x Series UNIVERSAL CRG718     | CC531A              |
| HP Color LaserJet CP2025dn,2025n,2027x Series UNIVERSAL CRG718     | CC532A              |
| HP Color LaserJet CP2025dn,2025n,2028x Series UNIVERSAL CRG718     | CC533A              |
| HP Colour LaserJet CMI312, CPI215, CPI515, CPI518 Series           | CB540A/Canon CRG716 |

|   |                     |
|---|---------------------|
| HP Colour LaserJet CMI312, CPI215, CPI515, CPI518 Series      | CB541A/Canon CRG716 |
| HP Colour LaserJet CMI312, CPI215, CPI515, CPI518 Series      | CB542A/Canon CRG716 |
| HP Colour LaserJet CMI312, CPI215, CPI515, CPI518 Series      | CB543A/Canon CRG716 |
| HP Colour LaserJet 1600, 2600 Series, CM-1015/CM-1017 MFP     | Q6000A              |
| HP Colour LaserJet 1600, 2600 Series, CM-1015/CM-1017 MFP     | Q6001A              |
| HP Colour LaserJet 1600, 2600 Series, CM-1015/CM-1017 MFP     | Q6002A              |
| HP Colour LaserJet 1600, 2600 Series, CM-1015/CM-1017 MFP     | Q6003A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x         | Q6470A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x         | Q7581A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x         | Q7582A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x         | Q7583A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x/CLJ3600 | Q6471A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x/CLJ3600 | Q6472A              |
| HP 3800/3800n/3800dn/3800dtn/CP3505n/CP3505dn/CP3505x/CLJ3600 | Q6473A              |
| HP Color Toner for Laserjet CP5225                            | CE740A              |
| HP Color Toner for Laserjet CP5225                            | CE741A              |
| HP Color Toner for Laserjet CP5225                            | CE742A              |
| HP Color Toner for Laserjet CP5225                            | CE743A              |

### Canon Series

|   |                                      |
|---|--------------------------------------|
| Canon LBP-3200/3210, MF 3110/3220/5630/5650/5730/5750/5770                          | EP-26/EP-27/CRG-U                    |
| Canon FC-100/120/200/210/220/230/310/330/530,<br>PC-740/750/760/770/780/860/880/890 | E30/31/40                            |
| IR2230/2270/2830/2870/3025/3030/3225/3230/3530/3570/4570                            | NPG-25/GPR-15/EXV11                  |
| IR2230/2270/2830/2870/3025/3030/3225/3230/3530/3570/4570                            | G25(DRUM)                            |
| IR3035/3045/3235/3245/3570/4530/4570/3530   | NPG-26/GPR-16/EXV12                  |
| IR3035/3045/3235/3245/3570/4530/4570/3530   | G26(DRUM)                            |
| IR2016/2018/2020/2022/2025/2030/2116/2120/2318/2320/2420                            | NPG-28/GPR-18/EXV14                  |
| IR2016/2018/2020/2022/2025/2030/2116/2120/2318/2320/2420                            | G28(DRUM)                            |
| IR1018/1019/1020/1022/1023/1024/1025  | NPG-32/GPR-22/EXV18                  |
| IR1018/1019/1020/1022/1023/1024/1025  | G37(DRUM)                            |
| IR2200/2220/2250/2800/2850/3300/3320/3350   | NPG-18/GPR-6/EXV3                    |
| Canon iR2520, iR2525, iR2530 CEXV33   | C-EVX33                              |
| Canon NP 6012/6112/6412/7130  | Canon I382A003AA<br>( Canon NPG-11 ) |
| Canon Fax L-200/220/240/250/260/280/290/300/350/360, MultiPass L60/90               | FX3                                  |
| Canon Laser Class 510, Fax L-380/400, PCD320/340                                    | FX8 / CRG-T                          |

### Samsung Series

|                             |       |
|-----------------------------|-------|
| ML-2165w/SF-760P/SCX-3405FW | ML101 |
|-----------------------------|-------|

## Arkusz1

|  |  |
|--|--|
| Samsung ML-2955ND/DW SCX-4729FD                          | ML103  |
| Samsung MLT-D116L  | ML116  |
| SAMSUNG 1660   | ML1660 (1042)  |
| SAMSUNG 1910   | ML1910 (1052)  |
| SAMSUNG 1640   | ML1082   |
| SAMSUNG 4300   | ML1092   |
| Samsung SCX-4650F/4650N/4652F/4655F/4655FN               | ML117S   |
| ML-1210/1220M/1430/1250, SF-808 SF-5100/5100P SF-530/550 | ML1210D3/SF5100/SCX4500                                |
| SAMSUNG ML1610   | ML1610/ML2010/SCX4521/<br>ML2510/SCX4321 Xerox<br>3117 |
| SAMSUNG ML1510/1710/1750                                 | ML1710/4100/SCX4216/Xer                                |
| SAMSUNG SCX4100 / SCX4016/4116/4216/4216F                | ox PE16  |
| SAMSUNG SF-560/565P/750/755P / MSYS 750/755P             |  |
| SAMSUNG Gestener DSM-516PF                               |  |
| Xerox 3130/3120/3115/3121/PE16                           |  |
| Samsung 3310/3710  | ML205  |
| Samsung SCX-5635FN / SCX-5835FN                          | ML208  |
| SAMSUNG 4824   | ML209  |
| Samsung ML-2150/2151N/2152W                              | ML2150   |
| ML-2250/2251/2252/2255G/M/4750                           | ML2250D5   |
| ML-2850  | ML2850   |
| Samsung 3470   | ML3470   |
| CLP-360/365/366/368, CLX-3300/3305/3306/3186/3185        | CLT-C406S  |
| CLP-360/365/366/368, CLX-3300/3305/3306/3186/3185        | CLT-K406S  |
| CLP-360/365/366/368, CLX-3300/3305/3306/3186/3185        | CLT-M406S  |
| CLP-360/365/366/368, CLX-3300/3305/3306/3186/3185        | CLT-Y406S  |
| CLP-320/321/325/326/3185/3186                            | CLT-C407S<br>- Drum CLT-R407/CLT-R409                  |
| CLP-320/321/325/326/3185/3186                            | CLT-K407S  |
| CLP-320/321/325/326/3185/3186                            | CLT-M407S  |
| CLP-320/321/325/326/3185/3186                            | CLT-Y407S  |
| CLP-310N/315 CLX-3170/3175/3175FN/3175N                  | CLT-K409S  |
| CLP-310N/315 CLX-3170/3175/3175FN/3175N                  | CLT-C409S  |
| CLP-310N/315 CLX-3170/3175/3175FN/3175N                  | CLT-M409S  |
| CLP-310N/315 CLX-3170/3175/3175FN/3175N                  | CLT-Y409S  |
| SAMSUNG SCX 4200   | SCX-4200   |
| Samsung ML4050N/4550/4551N/4551ND                        | ML4550A  |

SF560R

SF560R

| Brother series   |  |
|--|--|
| DCP7020/FAX2820/FAX2920<br>MFC7220/MFC7225N/MFC7420/MFC7820N<br>HL2030/2040/2070N TN2005 | TN350/TN2000/TN2025/TN2050   |
| Brother HL-2140/2150N/2170W  | TN360/2120/2125/2140/2150/2170   |
| BROTHER DCP-9010CN, HL-3040CN, HL-3070CW, MFC-9120CN, MFC-9320CW                         | TN230BK  |
| BROTHER DCP-9010CN, HL-3040CN, HL-3070CW, MFC-9120CN, MFC-9320CW                         | TN230C   |
| BROTHER DCP-9010CN, HL-3040CN, HL-3070CW, MFC-9120CN, MFC-9320CW                         | TN230M   |
| BROTHER DCP-9010CN, HL-3040CN, HL-3070CW, MFC-9120CN, MFC-9320CW                         | TN230Y   |
| I350/I370N/I850, MFC8370Dn   | TN3060/6600/7600<br>- TN3170/3280  |
| Brother HL-4140CN,4150CDN,4570CDW,MFC-9460CDN,MFC9560CDW                                 | TN325BK  |
| Brother HL-4140CN,4150CDN,4570CDW,MFC-9460CDN,MFC9560CDW                                 | TN325C   |
| Brother HL-4140CN,4150CDN,4570CDW,MFC-9460CDN,MFC9560CDW                                 | TN325M   |
| Brother HL-4140CN,4150CDN,4570CDW,MFC-9460CDN,MFC9560CDW                                 | TN325Y   |
| HL5440/5450/5470   | TN3380   |
| Brother HL 2230, HL 2240, HL 2240D, HL 2250DN, HL 2270DW                                 | TN450/TN2220   |
| DCP7020/FAX2820/FAX2920<br>MFC7220/MFC7225N/MFC7420/MFC7820N<br>HL2030/2040/2070N        | DR350/DR2000/DR2050/DR2025/DR2005<br><br>- DR2120<br>- DR2220<br>- DR3060/6600/7600<br>- DR3100/3200<br>- DR3300 |

## Lexmark Series

|  |                        |
|--|------------------------|
| Lexmark E230/232/234/330/332/342/330/332/340/342 | Lexmark E230/E232/E330 |
| Lexmark E250d/350d/352d                          | Lexmark E250           |
| Lexmark E260                                     | Lexmark E260           |
| Lexmark E360                                     | Lexmark E360           |

## Epson Series

|   |             |
|---|-------------|
| Epson AcuLaser C1100/C1100N/CX111/CX111NF, LP-A500/A500F/V500 | Epson 1100B |
|---|-------------|

Arkusz1

|  |                               |
|--|-------------------------------|
| Epson AcuLaser C1100/C1100N/CX11/CX11NF , LP-A500/A500F/V500 | Epson 1100C                   |
| Epson AcuLaser C1100/C1100N/CX11/CX11NF , LP-A500/A500F/V500 | Epson 1100M                   |
| Epson AcuLaser C1100/C1100N/CX11/CX11NF , LP-A500/A500F/V500 | Epson 1100Y                   |
| Epson C1700/C1750N/CX17NF BK                                 | Epson C1700BK<br>(C13S050614) |
| Epson C1700/C1750N/CX17NF Cyan                               | Epson C1700C<br>(C13S050613)  |
| Epson C1700/C1750N/CX17NF Magenta                            | Epson C1700M<br>(C13S050612)  |
| Epson C1700/C1750N/CX17NF Yellow                             | Epson C1700Y<br>(C13S050611)  |
| Epson AcuLaser M2000D/2000DT/2000DN/2000DTN                  | Epson M2000 (S050437)         |
| Epson AcuLaser M2400/MX20                                    | Epson M2400 (S050584)         |
| Epson EPL-6200/6200L, LP-1400                                | Epson EPL-6200 (S050167)      |
| Epson AcuLaser M2000/M2010 Series                            | Epson M2000 (S050435)         |

**Dell Series**

|                                  |             |
|----------------------------------|-------------|
| DELL1250C/1350CNW/1355CN/1355CNW | Dell 1250BK |
| DELL1250C/1350CNW/1355CN/1355CNW | Dell 1250C  |
| DELL1250C/1350CNW/1355CN/1355CNW | Dell 1250M  |
| DELL1250C/1350CNW/1355CN/1355CNW | Dell 1250Y  |
| Dell 2330/2350                   | Dell 2330   |

**Kyocera series**

|                                       |                        |
|---------------------------------------|------------------------|
| PRINTER FS-KM-1500                    | TK-100                 |
| FS-1030MFP/DP                         | TK1130                 |
| FS-1035MFP/DP                         | TK1140                 |
| PRINTER FS-1030                       | TK-120                 |
| PRINTER FS-3900DN / 4000DN            | TK-320/321/322/323/324 |
| PRINTER FS-2020D                      | TK-340/341/342/343/344 |
| PRINTER FS-3920DN                     | TK-350/351/352/353/354 |
| PRINTER FS-4020D                      | TK-360/361/362/363/364 |
| COPIER KM-1635 / 2035 /1650 / 2050    | TK-410/411/412/413/414 |
| COPIER Taskaifa-180 / 181 / 220 / 221 | TK-435/436/437/439     |
| PRINTER FS-C5305DN / 5300             | TK560 BK               |
| PRINTER FS-C5305DN / 5300             | TK560 C                |
| PRINTER FS-C5305DN / 5300             | TK560 M                |
| PRINTER FS-C5305DN / 5300             | TK560 Y                |
| PRINTER FS-C5400DN                    | TK570 BK               |

|                               |          |
|-------------------------------|----------|
| PRINTER FS-C5400DN            | TK570 C  |
| PRINTER FS-C5400DN            | TK570 M  |
| PRINTER FS-C5400DN            | TK570 Y  |
| PRINTER FS-5105DN / 5205DN    | TK580 BK |
| PRINTER FS-5105DN / 5205DN    | TK580 C  |
| PRINTER FS-5105DN / 5205DN    | TK580 M  |
| PRINTER FS-5105DN / 5205DN    | TK580 Y  |
| PRINTER FS-C2026 / C2126MFP   | TK590 BK |
| PRINTER FS-C2026 / C2126MFP   | TK590 C  |
| PRINTER FS-C2026 / C2126MFP   | TK590 M  |
| PRINTER FS-C2026 / C2126MFP   | TK590 Y  |
| PRINTER FS-9520DN / 9120DN    | TK-70/76 |
| COPIER Taskaifa 250ci / 300ci | TK865 BK |
| COPIER Taskaifa 250ci / 300ci | TK865 C  |
| COPIER Taskaifa 250ci / 300ci | TK865 M  |
| COPIER Taskaifa 250ci / 300ci | TK865 Y  |

### Konica Minolta Series

|                              |                                |
|------------------------------|--------------------------------|
| Minolta I300                 | I710567-003 for Minolta I300   |
| Minolta I600/I690            | A0V30IH (Minolta I600/I690 BK) |
| Minolta I600/I690            | A0V30HH (Minolta I600/I690 C)  |
| Minolta I600/I690            | A0V30HH (Minolta I600/I690 M)  |
| Minolta I600/I690            | A0V30HH (Minolta I600/I690 Y)  |
| Bizhub 600 / 601 / 750 / 751 | Minolta TN710                  |

### OKI Series

|   |                        |
|---|------------------------|
| B411/431 MB461/471/491  | 44574701 for OKI B411  |
| B411/431 MB461/471/491  | 44917601 for OKI B431  |
| OKI C9600,C9600N,C9600HN,<br>C9600HDN,C9800,C9800HN,<br>C9800HDN,C9800MFP,<br>C9800GA,C9800GA MFP | 42918902 for C9600 M   |
| B4100/4200/4250/4300/4350   | 42103001 for OKI B4100 |
| B4100/4200/4250/4300/4350   | 42102901 for OKI B4300 |

|   |                       |
|---|-----------------------|
| OKI C9600,C9600N,C9600HN,<br>C9600HDN,C9800,C9800HN,<br>C9800HDN,C9800MFP,<br>C9800GA,C9800GA MFP | 42918904 for C9600 BK |
|---|-----------------------|

|   |                      |
|---|----------------------|
| OKI C9600,C9600N,C9600HN,<br>C9600HDN,C9800,C9800HN,<br>C9800HDN,C9800MFP,<br>C9800GA,C9800GA MFP | 42918903 for C9600 C |
|---|----------------------|

|   |                      |
|---|----------------------|
| OKI C9600,C9600N,C9600HN,<br>C9600HDN,C9800,C9800HN,<br>C9800HDN,C9800MFP,<br>C9800GA,C9800GA MFP | 42918901 for C9600 Y |
|---|----------------------|

### Xerox Series

|                         |   |
|-------------------------|---|
| Phaser 3010/3040 WC3045 | 106R02183 for Phaser<br>C3010/3045/3040 |
|-------------------------|---|

|                 |                           |
|-----------------|---------------------------|
| P3140/3155/3160 | 108R00909 for Phaser 3140 |
|-----------------|---------------------------|

|            |            |
|------------|------------|
| Xerox 3250 | Xerox 3250 |
|------------|------------|

|                         |                           |
|-------------------------|---------------------------|
| Phaser 6000/6010 WC6015 | 106R01630 for Phaser 6010 |
|-------------------------|---------------------------|

|                         |                           |
|-------------------------|---------------------------|
| Phaser 6000/6010 WC6015 | 106R01627 for Phaser 6010 |
|-------------------------|---------------------------|

|                         |                           |
|-------------------------|---------------------------|
| Phaser 6000/6010 WC6015 | 106R01628 for Phaser 6010 |
|-------------------------|---------------------------|

|                         |                           |
|-------------------------|---------------------------|
| Phaser 6000/6010 WC6015 | 106R01629 for Phaser 6010 |
|-------------------------|---------------------------|

### Panasonics Series

|              |          |
|--------------|----------|
| KXMB 2030PDW | FAT-411E |
|--------------|----------|

|          |           |
|----------|-----------|
| KX MB773 | KX-FAT92E |
|----------|-----------|

### InkJet Canon

|       |           |
|-------|-----------|
| Canon | PGI-520BK |
|-------|-----------|

|   |  |
|---|--|
| IP3600/IP4600/IP4700;MP540/MP550/MP560/MP620/MP630/MP640/MP980/MP990(Europe/MiddleEast/Africa/Australia/NewZealand) |  |
|---|--|

|   |           |
|---|-----------|
| Canon MG8150/MG6150/MG5250/MG5150/IP4850/iX6550/MX885(EUR/AU) | PGI-525BK |
|---|-----------|



|  |         |
|--|---------|
| PIXMAip<br>3300/iP3500/IP4200/IP4200RFB/IP4300/IP4500/IP5200/IP5200R/IP5300/IX4000/IX5000<br>All-in-<br>OneMP500/MP510/MP520/MP530/MP600/600R/MP610/MP800/MP800R/MP810/MP830/<br>MP950/MP960/MP970/MX700/MX850 | PGI-5BK |
|--|---------|

## InkJet Canon

|  |           |
|--|-----------|
| Canon<br>IP3600/IP4600/IP4700;MP540/MP550/MP560/MP620/MP630/MP640/MP980/MP990(Europ<br>e/MiddleEast/Africa/Australia/NewZealand)   | CLI-521BK |
| Canon<br>IP3600/IP4600/IP4700;MP540/MP550/MP560/MP620/MP630/MP640/MP980/MP990(Europ<br>e/MiddleEast/Africa/Australia/NewZealand)   | CLI-521C  |
| Canon<br>IP3600/IP4600/IP4700;MP540/MP550/MP560/MP620/MP630/MP640/MP980/MP990(Europ<br>e/MiddleEast/Africa/Australia/NewZealand)   | CLI-521M  |
| Canon<br>IP3600/IP4600/IP4700;MP540/MP550/MP560/MP620/MP630/MP640/MP980/MP990(Europ<br>e/MiddleEast/Africa/Australia/NewZealand)   | CLI-521Y  |
| Canon MG8150/MG6150/MG5250/MG5150/IP4850/iX6550/MX885(EUR/AU)  | CLI-526BK |
| Canon MG8150/MG6150/MG5250/MG5150/IP4850/iX6550/MX885(EUR/AU)  | CLI-526C  |
| Canon MG8150/MG6150/MG5250/MG5150/IP4850/iX6550/MX885(EUR/AU)  | CLI-526M  |
| Canon MG8150/MG6150/MG5250/MG5150/IP4850/iX6550/MX885(EUR/AU)  | CLI-526Y  |
| PIXMAip<br>3300/iP4300/iP4200RFB/iP4200/iP4300/iP4500/iP5200/iP5200R/iP6600D/iP6700D<br>Pro9000<br>MP500/MP530/MP600/MP600R/MP800/MP800R/MP810/MP830/MP950/MP960/MP970/M<br>X850 | CLI-8BK   |
| PIXMAip<br>3300/iP4300/iP4200RFB/iP4200/iP4300/iP4500/iP5200/iP5200R/iP6600D/iP6700D<br>Pro9000<br>MP500/MP530/MP600/MP600R/MP800/MP800R/MP810/MP830/MP950/MP960/MP970/M<br>X850 | CLI-8C    |
| PIXMAip<br>3300/iP4300/iP4200RFB/iP4200/iP4300/iP4500/iP5200/iP5200R/iP6600D/iP6700D<br>Pro9000<br>MP500/MP530/MP600/MP600R/MP800/MP800R/MP810/MP830/MP950/MP960/MP970/M<br>X850 | CLI-8M    |

|  |        |
|--|--------|
| PIXMAip<br>3300/iP4300/iP4200RFB/iP4200/iP4300/iP4500/iP5200/iP5200R/iP6600D/iP6700D<br>Pro9000<br>MP500/MP530/MP600/MP600R/MP800/MP800R/MP810/MP830/MP950/MP960/MP970/M<br>X850 | CLI-8Y |
|--|--------|

|  |          |
|--|----------|
| PIXMAip 2700 PixmaMP240 PixmaMP250 PixmaMP260 PixmaMP270 PixmaMP280<br>PixmaMP480 PixmaMP490 PixmaMP495 PixmaMX320 PixmaMX330 PixmaMX340<br>PixmaMX350 | R-CL-511 |
|--|----------|

|  |          |
|--|----------|
| PIXMAip 2700 PixmaMP240 PixmaMP250 PixmaMP260 PixmaMP270 PixmaMP280<br>PixmaMP480 PixmaMP490 PixmaMP495 PixmaMX320 PixmaMX330 PixmaMX340<br>PixmaMX350 | R-PG-510 |
|--|----------|

### Inkjet Canon

|   |            |
|---|------------|
| PIXMAip 1000/iP1500/iP2000/MP110/MP130PIXUS<br>MP375Ri250/i255/i320/i350/i355/i450/i450x/i455/i470D/i475DS200/S200x/S200SP/S200SP<br>x/S300/S330Photo<br>SmartBaseMP360/MP370/MP390/MPC190/MPC190S/MPC200/MPC200Photo/MPC360/M<br>PC390 | BCI-21/24B |
|---|------------|

|   |            |
|---|------------|
| PIXMAip 1000/iP1500/iP2000/MP110/MP130PIXUS<br>MP375Ri250/i255/i320/i350/i355/i450/i450x/i455/i470D/i475DS200/S200x/S200SP/S200SP<br>x/S300/S330Photo<br>SmartBaseMP360/MP370/MP390/MPC190/MPC190S/MPC200/MPC200Photo/MPC360/M<br>PC390 | BCI-21/24C |
|---|------------|

### Inkjet Epson

|   |       |
|---|-------|
| Stylus<br>DX4000/DX4050/DX4400/DX4450/DX5000/DX5050/DX6000/DX6050/DX7000/DX70<br>00F/DX7400/DX7450/DX8000/DX8400/DX8450/DX9000/DX9400/DX9400F/DX9400F<br>WiFi/DX9450;D78/D92/D98/D120/D120WiFi/D128;S20/S21/SX100/SX105/SX110/SX115<br>/SX200/SX205/SX209/SX210/SX215/SX400/SX405/SX405WiFi/SX410/SX415/SX510W/S<br>X515W/SX600FW/SX610FW;OfficeB40W/BX300FW/BX310FN/BX600FW/BX610FW/B<br>X3450;BI100 | T0711 |
|---|-------|

|   |       |
|---|-------|
| Stylus<br>DX4000/DX4050/DX4400/DX4450/DX5000/DX5050/DX6000/DX6050/DX7000/DX70<br>00F/DX7400/DX7450/DX8000/DX8400/DX8450/DX9000/DX9400/DX9400F/DX9400F<br>WiFi/DX9450;D78/D92/D98/D120/D120WiFi/D128;S20/S21/SX100/SX105/SX110/SX115<br>/SX200/SX205/SX209/SX210/SX215/SX400/SX405/SX405WiFi/SX410/SX415/SX510W/S<br>X515W/SX600FW/SX610FW;OfficeB40W/BX300FW/BX310FN/BX600FW/BX610FW/B<br>X3450;BI100 | T0712 |
|---|-------|

Stylus T0713  
 DX4000/DX4050/DX4400/DX4450/DX5000/DX5050/DX6000/DX6050/DX7000/DX7000F/DX7400/DX7450/DX8000/DX8400/DX8450/DX9000/DX9400/DX9400F/DX9400F WiFi/DX9450;D78/D92/D98/D120/D120WiFi/D128;S20/S21/SX100/SX105/SX110/SX115/SX200/SX205/SX209/SX210/SX215/SX400/SX405/SX405WiFi/SX410/SX415/SX510W/SX515W/SX600FW/SX610FW;OfficeB40W/BX300FW/BX310FN/BX600FW/BX610FW/BX3450;BI100

Stylus T0714  
 DX4000/DX4050/DX4400/DX4450/DX5000/DX5050/DX6000/DX6050/DX7000/DX7000F/DX7400/DX7450/DX8000/DX8400/DX8450/DX9000/DX9400/DX9400F/DX9400F WiFi/DX9450;D78/D92/D98/D120/D120WiFi/D128;S20/S21/SX100/SX105/SX110/SX115/SX200/SX205/SX209/SX210/SX215/SX400/SX405/SX405WiFi/SX410/SX415/SX510W/SX515W/SX600FW/SX610FW;OfficeB40W/BX300FW/BX310FN/BX600FW/BX610FW/BX3450;BI100

Epson Stylus SX125/ T1282  
 SX130/S22/SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/Office BX305F/BX305FW

Epson Stylus SX125/ T1281  
 SX130/S22/SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/Office BX305F/BX305FW

Epson Stylus SX125/ T1283  
 SX130/S22/SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/Office BX305F/BX305FW

Epson Stylus SX125/ T1284  
 SX130/S22/SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/Office BX305F/BX305FW

Stylus T1291  
 SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/SX525WD/SX535WD/SX620FW/BX925FW Office B42WD/BX305F/BX305FW/BX320/BX320FW/BX525WD/BX535WD/BX625FWD/BX635FWD/BX925FWD/BX935FWD WorkForce WF-7015/WF-7515/WF-7525

Stylus T1292  
 SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/SX525WD/SX535WD/SX620FW/BX925FW Office B42WD/BX305F/BX305FW/BX320/BX320FW/BX525WD/BX535WD/BX625FWD/BX635FWD/BX925FWD/BX935FWD WorkForce WF-7015/WF-7515/WF-7525

Stylus T1293  
 SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/SX525WD/SX535WD/SX620FW/BX925FW Office B42WD/BX305F/BX305FW/BX320/BX320FW/BX525WD/BX535WD/BX625FWD/BX635FWD/BX925FWD/BX935FWD WorkForce WF-7015/WF-7515/WF-7525

|   |  |
|---|--|
| Stylus<br>SX230/SX235W/SX420W/SX425W/SX435W/SX440W/SX445/SX525WD/SX535WD/SX<br>620FW/BX925FW Office B42WD/BX305F/BX305FW/BX320/<br>BX320FW/BX525WD/BX535WD/BX625FWD/BX635FWD/BX925FWD/BX935FWD<br>WorkForce WF-7015/WF-7515/WF-7525 | T1294  |
| Epson Workforce WF-2010W<br>/WF-2510WF/WF-2520NF/WF-2530WF/WF-2540WF  | T1631  |
| Epson Workforce WF-2010W<br>/WF-2510WF/WF-2520NF/WF-2530WF/WF-2540WF  | T1632  |
| Epson Workforce WF-2010W<br>/WF-2510WF/WF-2520NF/WF-2530WF/WF-2540WF  | T1633  |
| EPSON XP-30/ 102/ 202/ 305/ 405   | T1811  |
| EPSON XP-30/ 102/ 202/ 305/ 405   | T1812  |
| EPSON XP-30/ 102/ 202/ 305/ 405   | T1813  |
| EPSON XP-30/ 102/ 202/ 305/ 405   | T1814  |
| XP-500/600/605/700/800  | T2621  |
| XP-500/600/605/700/800  | T2631  |
| XP-500/600/605/700/800  | T2632  |
| XP-500/600/605/700/800  | T2633  |
| XP-500/600/605/700/800  | T2634  |
| Epson Workforce WF-2010W<br>/WF-2510WF/WF-2520NF/WF-2530WF/WF-2540WF  | T1634  |
| <b>Inkjet Brother</b>   |  |
| Brother DCP-130C/330C/540CN/750CW/750WN/750DN;MFC-<br>240CN/440CN/660CN/665CW/845CW/850CDN/850CDWN/3360CN/5460CN/5860C<br>N;Brother DCP-135c/150c/153c/157cMFC-235c/260c;FAX-1360   | LC10/LC37/LC51/LC57/LC9<br>60/LC970/LC100BK      |
| Brother DCP-130C/330C/540CN/750CW/750WN/750DN;MFC-<br>240CN/440CN/660CN/665CW/845CW/850CDN/850CDWN/3360CN/5460CN/5860C<br>N;Brother DCP-135c/150c/153c/157cMFC-235c/260c;FAX-1360   | LC10/LC37/LC51/LC57/LC9<br>60/LC970/LC100C       |
| Brother DCP-130C/330C/540CN/750CW/750WN/750DN;MFC-<br>240CN/440CN/660CN/665CW/845CW/850CDN/850CDWN/3360CN/5460CN/5860C<br>N;Brother DCP-135c/150c/153c/157cMFC-235c/260c;FAX-1360   | LC10/LC37/LC51/LC57/LC9<br>60/LC970/LC100M       |
| Brother DCP-130C/330C/540CN/750CW/750WN/750DN;MFC-<br>240CN/440CN/660CN/665CW/845CW/850CDN/850CDWN/3360CN/5460CN/5860C<br>N;Brother DCP-135c/150c/153c/157cMFC-235c/260c;FAX-1360   | LC10/LC37/LC51/LC57/LC9<br>60/LC970/LC100Y       |
| Brother DCP-145C/165C/385C/585CW/6690CW;MFC-<br>250C/290C/490CW/790CW/990CW/5490CN/5890CN/6490CW  | LC11/LC16/LC38/LC61/LC6<br>5/LC67/LC980/LC1100BK |

|  |   |
|--|---|
| Brother DCP-145C/165C/385C/585CW/6690CW;MFC-<br>250C/290C/490CW/790CW/990CW/5490CN/5890CN/6490CW   | LC11/LC16/LC38/LC61/LC65/LC67/LC980/LC1100C |
| Brother DCP-145C/165C/385C/585CW/6690CW;MFC-<br>250C/290C/490CW/790CW/990CW/5490CN/5890CN/6490CW   | LC11/LC16/LC38/LC61/LC65/LC67/LC980/LC1100M |
| Brother DCP-145C/165C/385C/585CW/6690CW;MFC-<br>250C/290C/490CW/790CW/990CW/5490CN/5890CN/6490CW   | LC11/LC16/LC38/LC61/LC65/LC67/LC980/LC1100Y |
| MFC-<br>J6510DW/J6710DW/J6910DW/J280W/J425W/J430W/J435W/J625DW/J705D/J705DW/J80/1240/1280BK<br>35DW/J825DW/J825N/J955DN/J5910CDW/J6710CDW/J6910CDW/DCP-<br>J525W/J725DW/J925DW/J525N/J725N/J925N                   | LC12/17/73/77/75/79/400/45                  |
| MFC-<br>J6510DW/J6710DW/J6910DW/J280W/J425W/J430W/J435W/J625DW/J705D/J705DW/J80/1240/1280C<br>35DW/J825DW/J825N/J955DN/J5910CDW/J6710CDW/J6910CDW/DCP-<br>J525W/J725DW/J925DW/J525N/J725N/J925N                    | LC12/17/73/77/75/79/400/45                  |
| MFC-<br>J6510DW/J6710DW/J6910DW/J280W/J425W/J430W/J435W/J625DW/J705D/J705DW/J80/1240/1280M<br>35DW/J825DW/J825N/J955DN/J5910CDW/J6710CDW/J6910CDW/DCP-<br>J525W/J725DW/J925DW/J525N/J725N/J925N                    | LC12/17/73/77/75/79/400/45                  |
| MFC-<br>J6510DW/J6710DW/J6910DW/J280W/J425W/J430W/J435W/J625DW/J705D/J705DW/J80/1240/1280Y<br>35DW/J825DW/J825N/J955DN/J5910CDW/J6710CDW/J6910CDW/DCP-<br>J525W/J725DW/J925DW/J525N/J725N/J925N                    | LC12/17/73/77/75/79/400/45                  |
| Brother DCP-110C/115C/120C/310CN/315C<br>Brother MFC-<br>210C/215C/410CN/420CN/425CN/610CLN/610CLWN/615CL/620CN/620CLN/640C<br>W/830CLN/830CLWN/3240C/3340CN/5440CN/5840CN<br>Brother FAX-1835C/1840C/1940CN/2440C | LC09/LC41/LC47/LC900/LC950BK                |
| Brother DCP-110C/115C/120C/310CN/315C<br>Brother MFC-<br>210C/215C/410CN/420CN/425CN/610CLN/610CLWN/615CL/620CN/620CLN/640C<br>W/830CLN/830CLWN/3240C/3340CN/5440CN/5840CN<br>Brother FAX-1835C/1840C/1940CN/2440C | LC09/LC41/LC47/LC900/LC950C                 |
| Brother DCP-110C/115C/120C/310CN/315C<br>Brother MFC-<br>210C/215C/410CN/420CN/425CN/610CLN/610CLWN/615CL/620CN/620CLN/640C<br>W/830CLN/830CLWN/3240C/3340CN/5440CN/5840CN<br>Brother FAX-1835C/1840C/1940CN/2440C | LC09/LC41/LC47/LC900/LC950M                 |

|  |                             |
|--|-----------------------------|
| Brother DCP-110C/115C/120C/310CN/315C  | LC09/LC41/LC47/LC900/LC950Y |
| Brother MFC-210C/215C/410CN/420CN/425CN/610CLN/610CLWN/615CL/620CN/620CLN/640W/830CLN/830CLWN/3240C/3340CN/5440CN/5840CN |                             |
| Brother FAX-1835C/1840C/1940CN/2440C   |                             |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC123BK                     |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC123C                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC123M                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC123Y                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC125C                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC125M                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC125Y                      |
| MFC-J4410DW/J4510DW/J4610DW/J4710DW  | LC127BK                     |
| DCP-J125/DCP-J315W/DCP-J515W/MFC-J220/MFC-J265W/MFC-J410/MFC-J415W   | LC39/LC985BK                |
| DCP-J125/DCP-J315W/DCP-J515W/MFC-J220/MFC-J265W/MFC-J410/MFC-J415W   | LC39/LC985C                 |
| DCP-J125/DCP-J315W/DCP-J515W/MFC-J220/MFC-J265W/MFC-J410/MFC-J415W   | LC39/LC985M                 |
| DCP-J125/DCP-J315W/DCP-J515W/MFC-J220/MFC-J265W/MFC-J410/MFC-J415W   | LC39/LC985Y                 |

**Inkjet HP**

|  |               |
|--|---------------|
| Deskjet<br>810C/812C/825C/825Cvr/840C/841C/842C/843C/845C/845Cvr/920C/940C/940Cvr/948C/3820OfficeJet5110 Series/V40 Series<br>PSC500/500Xi/750/750Xi/950/950Vr/950XiFax1230/1230XiDigitalCopier310 | R-HP15(C6615) |
| HP Deskjet Series<br>825c/825cvr/840c/841c/842c/845c/845cvr  | R-HP17(C6625) |

|   |                      |
|---|----------------------|
| HP Deskjet Series<br>3900 Series -3910/3918/3920/3930/3930V/3938/3940/3940V<br>D1330 Series -D1311/D1320<br>D1360 Series -D1341<br>D2330 Series -D2320<br>D2360 Series -D2345<br>F300 Series -F310/F325/F335/F340/F350/F370/F380/F385/F390<br>HP Officejet Series 4310 Series -4311/4315/4315v/4315xi<br>4350 Series -4355<br>HP PSC Series<br>1400 Series -1410/1410v/1410xi<br>HP Fax1250<br>HP 915 InkJet All-in-OnePrinter/Scanner/Copier(CB720A)<br>HP DeskjetD2460Printer(CB611A)<br>HP DeskjetF380All-in-OnePrinter/Scanner/Copier(Q8134A)<br>HP Deskjet | R-HP21XL(C9351A)     |
| HP Deskjet Series<br>3900 Series -3910/3918/3920/3930/3930V/3938/3940/3940V<br>D1330 Series -D1311/D1320<br>D1360 Series -D1341<br>D2330 Series -D2320<br>D2360 Series -D2345<br>F300 Series -F310/F325/F335/F340/F350/F370/F380/F385/F390<br>HP Officejet Series 4310 Series -4311/4315/4315v/4315xi<br>4350 Series -4355<br>HP PSC Series<br>1400 Series -1410/1410v/1410xi<br>HP Fax1250<br>HP 915 InkJet All-in-OnePrinter/Scanner/Copier(CB720A)<br>HP DeskjetD2460Printer(CB611A)<br>HP DeskjetF380All-in-OnePrinter/Scanner/Copier(Q8134A)<br>HP Deskjet | R-HP22XL(C9352A)     |
| HP Deskjet D2560  | R-HP300BXL(CC641EE)  |
| HP Deskjet D2560  | R-HP300CXL(CC644EE)  |
| HP Deskjet 1000/1050/2000/2050  | R-HP301B XL(CH563EE) |
| HP Deskjet 1000/1050/2000/2050  | R-HP301C XL(CH564EE) |
| HP Deskjet 5440   | R-HP336(C9362E)      |
| HP Officejet 6310   |                      |
| HP Photo smart2710/2575/C3180/C4180   |                      |
| HP PSC1510  |                      |
| Deskjet 6840/9800/9800d/6210  | R-HP337(C9364E)      |

|   |                    |
|---|--------------------|
| HP DeskJet 460c/5740/5745/6520/6540/6620/6840/9800                                  | R-HP338(C8765E)    |
| HP OfficeJet 6200/6210/7210/7310/7410   |                    |
| HP Photo smart2570/2610/2610v/2610xi/2710/2710xi/8150/8450/8750                     |                    |
| HP PSC 1507/1510/1600/1610/1610v/1610xi/2350/2355                                   |                    |
| HP DeskJet 5740/5940/6520/6540/6620/6840/6940/6980/9800                             | R-HP339(C8767E)    |
| HP OfficeJet 7210/7310/7410   |                    |
| HP Photo smart2570/2610/2610v/2610xi/2710/2710xi/8050/8150/8450/8750                |                    |
| HP DeskJet 5440   | R-HP342(C9361E)    |
| HP OfficeJet 6310   |                    |
| HP Photo smartC3180/C4180   |                    |
| HP PSC 1510   |                    |
| HP DeskJet 460C/5740/5745/6520/6540/6620/6840/9800                                  | R-HP343(C8766E)    |
| HP OfficeJet 6200/6210/7210/7310/7410   |                    |
| HP Photo smart325/375/422/425/428/2570/2610/2610v/2610xi/2710/2710xi/8150/8450/8750 |                    |
| HP PSC 1507/1510/1600/1610/1610v/1610xi/2350/2355                                   |                    |
| HP DeskJet 460c/5740/5940/6520/6540/6620/6840/6940/6980/9800                        | R-HP344(C9363E)    |
| HP OfficeJet 6200/6210/7210/7310/7410   |                    |
| HP Photo smart325/375/422/425/428/2570/2610/2610v/2610xi/2710/2710xi/8150/8450/8750 |                    |
| HP PSC 1600/1610/1610v/1610xi/2350/2355   |                    |
| HP DeskJet 5740/6520/6540/6620/6840/9800  | R-HP348(C9369E)    |
| HP OfficeJet 6210/7210/7310/7410  |                    |
| HP Photo Smart2610/2710/8150/8450/8750  |                    |
| HP Printer/Scanner/Copier 1610/2350/2353/2355                                       |                    |
| HP D4260/D4360/J6480/J5780/C4280/C5280/C4480/C4480/C5250/D5360                      | R-HP350XL(CB336EE) |
| HP D4260/D4360/J6480/J5780/C4280/C5280/C4480/C4480/C5250/D5360                      | R-HP351XL(CB338EE) |
| HP Photo smartB8550/C6380/D5463/B8553/C6383/D5468/B8558/C6480/C5380/D5460()         | HP364XL(CN684EE)   |
| HP Photo smartB8550/C6380/D5463/B8553/C6383/D5468/B8558/C6480/C5380/D5460()         | HP364XL(CB323EE)   |
| HP Photo smartB8550/C6380/D5463/B8553/C6383/D5468/B8558/C6480/C5380/D5460()         | HP364XL(CB324EE)   |
| HP Photo smartB8550/C6380/D5463/B8553/C6383/D5468/B8558/C6480/C5380/D5460()         | HP364XL(CB325EE)   |



|   |                    |
|---|--------------------|
| DeskJet<br>200/200Cci/710C/712C/720C/722C/820Cse/820Cxi/830C/832C/850C/855C/855Cse/855Cxi/870Cse/870Cxi/880C/882C/890Cse/890Cxi/895Cse/895Cxi/930C/932C/935C/950C/952C/960C/960Cse/960Cxi/970Cse/970Cxi/990Cm/990Cse/990Cxi/995C/995Ck/1000Cse/1000Cxi/1100C/1120C/1120Cse/1120Cxi/1125C/1180C/1220C/1220Cps/1220Cse/1220Cxi/1280/1600C/1600Cm/1600Cn/8250C/6122/6127/9300OfficeJetPro1150C/Pro1150Cse/Pro1170C/Pro1170Cse/Pro1170Cxi/Pro1175C/Pro1175Cse/Pro1175Cxi/G55/G55Xi/G85/G85Xi/G95/K60/K60Xi/K80/K80Xi/R40/R6 | R-HP45(51645)      |
| DeskJet 450/5150/5550/5552/5650/5652/5850<br>Series/9650/9670/9680PSC1110/1210/1315/1350/2110/2175/2210/2410/2510 Series<br>Photo smart7150/7155/7260/7350/7450/7550/7660/7760/7960 Series<br>OfficeJet4110/4110V/4110Cxi/4215/4225/5510/6110/6110XiDigitalCopier410Fax1240   | R-HP56(C6656)      |
| DeskJet 450/5150/5550/5552/5650/5652/5850<br>Series/9650/9670/9680PSC1110/1210/1315/1350/2110/2175/2210/2410/2510 Series<br>Photo smart7150/7155/7260/7350/7450/7550/7660/7760/7960 Series<br>OfficeJet4110/4110V/4110Cxi/4215/4225/5510/6110/6110XiDigitalCopier410Fax1240   | R-HP57(C6657)      |
| DeskJet<br>920C/930C/932C/935C/940C/940Cvr/948C/950C/952C/960C/960Cse/960Cxi/970Cse/970Cxi/990Cm/990Cse/990Cxi/995C/995Ck/1180C/1220C/1220Cps/1220Cse/1220Cxi/1280/3820/6122/6127/9300Photo<br>SmartPI000/PI000Xi/PI100/PI100Xi/1115/1115Cvr/1215/1215Vm.1218/1218Xi/1315PS<br>C750/750Xi/950/950Vr/950XiOfficeJetG55/G55Xi/G85/G85Xi/G95/K60/K60Xi/K80/K80Xi/V40/V40Xi/5110/5110A2L/5110V/5110XiColorCopier180/190/280/290Fax1220/1220Xi/1230/1230Xi   | R-HP78(C6578)      |
| HP OfficeJet J4580/J4660andJ4680 Printer s  | R-HP901XL(CC654AN) |
| HP OfficeJet J4580/J4660andJ4680 Printer s  | R-HP901XL(CC656AN) |
| HP Officejet 6000 Printer (CB051A) HP Officejet 6500 All-in-One (CB815A)HP Officejet 6500 Wireless(CB057A)  | HP920XL(CD975AA)   |
| HP Officejet 6000 Printer (CB051A) HP Officejet 6500 All-in-One (CB815A)HP Officejet 6500 Wireless(CB057A)  | HP920XL(CD972AA)   |
| HP Officejet 6000 Printer (CB051A) HP Officejet 6500 All-in-One (CB815A)HP Officejet 6500 Wireless(CB057A)  | HP920XL(CD973AA)   |
| HP Officejet 6000 Printer (CB051A) HP Officejet 6500 All-in-One (CB815A)HP Officejet 6500 Wireless(CB057A)  | HP920XL(CD974AA)   |
| Officejet Pro 8000(CB092A)8000 Wireless 8500 All-in-One Printers(CB862A)  | HP940XL(C4906AN)   |
| Officejet Pro 8000(CB092A)8000 Wireless 8500 All-in-One Printers(CB862A)  | HP940XL(C4907AN)   |
| Officejet Pro 8000(CB092A)8000 Wireless 8500 All-in-One Printers(CB862A)  | HP940XL(C4908AN)   |
| Officejet Pro 8000(CB092A)8000 Wireless 8500 All-in-One Printers(CB862A)  | HP940XL(C4909AN)   |